



専用附属品

Pigeon 35 フート

Pigeon 35 枠付フィルター各色

" " セット (三ツ組)

Pigeon フート・アース (パテント)

Pigeon 三脚 五段

" " 六段

" " 七段

" " ケース (雲台モ入リマス)

" " シネ 雲台中型

" " " 大型

ユーコンフラツシ 1 ガン 単 2 號用


" 單 1 號用

外各種製品取揃へて有ります。

總 發 賣 元

東京都板橋區板橋町 5 ノ 8 9 2

合資會社 遠 藤 カ メ ラ 店

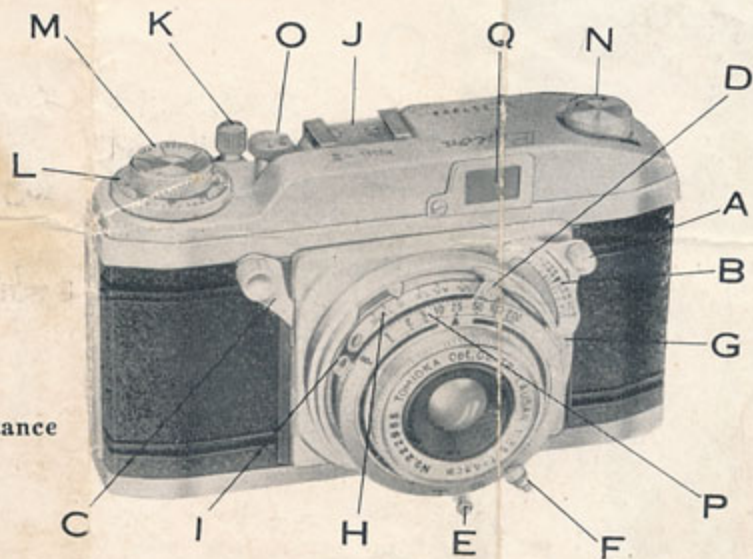

- | | | |
|---|-------------|-------------------------------|
| A | 距離調節ハンドル | Handle for Adjusting Distance |
| B | 焦点深度表 | Depth of Field Scale |
| C | シャッターレバー | Shutter Release Lever |
| D | セツトレバー | Shutter Set Lever |
| E | セルフタイマー | Self-Timer |
| F | コダック式シンクロ装置 | Kodak-Type Synchro Device |
| G | 絞り調節ボタン | Button for Adjusting Stop |
| H | 絞り板 | Iris Diaphragm Scale |

- | | | |
|---|-----------|----------------------------------|
| I | リリースロ | Socket for Releasing |
| J | 附属装差部 | Accessory Clip |
| K | 巻取レバー | Winding Knob |
| L | フィルム収数計 | Exposure Counting Dial |
| M | 装填フィルム表示盤 | Plate for Indicating Loaded Film |
| N | 巻戻レノブ | Rewinding Knob |
| O | 切換ボタン | Change Button |
| P | シャッター目盛板 | Shutter Speed Dial |
| Q | ファインダー | Finder |

Shutter

This shutter is the Pronter-Type furnished with a self-timer, The mechanism is as follows, that is, when the Set-Lever (D) is set and the Shutter Release Lever (C) is pushed, the shutter is released.

The shutter Speed Dial provides the speeds of B (Bulb), 1, 1/2, 1/5, 1/10, 1/25, 1/50, 1/100 and 1/200 second as Indicated

When the Mark-A on the Triple Change Button (O) is adjusted with the Index Mark (▲), double Exposure are prevented automatically.

At This Time the Shutter Release Lever will not operate, unless one Exposure of the film is wound completely.

When the Mark-D on it (O) is adjusted with the Index Mark (▲), the Consecutive photographing is ready to start. so that if the Self -Timer (E) is set, the shutter is Released at the same time.

Please wind the Triple change Button (O) towards the direction of the arrow without fail.

Adjusting Distance

Adjusting Distance is formed in the Helicoid-Type, if the figures on the Distance Scale (3~∞) are joined together with the Distance Index Mark (▲), on the Depth of Field Scale (B), by the controlling of the Handle for Adjusting Distance (A), that is all right.

Now while the distance is adjusted, the Depth of Field can be seen correctly at the same time, by the aid of the special lever.

Winding

Each time the Winding knob (K) is turned until it stops, one frame of the film is moved automatically Exposure.

The Counting Dial (L) registers the number of the exposures with correctness This is a special new design device.

The plate for Indicating Loaded Film (M) which is at the upper Part of the Exposure's Counting Dial (L), is able to indicate the kind of the loaded film. When the Mark-R on the Triple Change Button is adjusted with the Index Mark (▲), and when the Rewinding knob (N) is lifted up and is turned towards the direction of the arrow, Then The Film is Rewound.

Film Loading

The Rewinding knob (N) is pulled up, the patronery (Magazine) is inserted. N is dropped along the scroll. The short tapered end of the film is drawn out and is wound round the spool at last the Back-Cover is shut now The Film

Loading is completed

To start photographing, turn the Winding Knob three times, and/ Adred just on The Counting dial the First exposure (L) with the Index Mark forming a circle.

Opening or Shutting the Back-Cover

When the arrow on the Lever for Opening or Shutting the Back-Cover (P) is turned to the Mark-O (open), and when the Back-Cover is depressed, it is opened with ease,

*F. reversed
A. double exp. printed*